

M3 MOBILE

Your Best Mobile Business Partner

M3 *SM10*

User Manual

Version 1.2 © 2015

Cautions When Using This Manual

Thank you for purchasing the M3 SM10. This device provides high performance data collection and mobile communications that meet industrial standards.

This user manual enables users to know the characteristics of the M3 SM10 series and how to use it.

Caution

- Please carefully read this manual before using the device to ensure safe and proper use, as well as to prevent accidents that may occur when the device is used.
- This manual is created based on the current status. The details on this manual may be changed without prior notice.
- The descriptions of this manual are based on the device's default settings.
- Images and screenshots are described with the latest software version.
- This manual is created under the assumption that the device has all options. For detailed information on available options, contact the local distributor or refer to our Web site (<http://www.m3mobile.co.kr>).
- M3 Mobile does not have any legal responsibility for any performance problem that may occur when a user uses an application that is supplied by a third party.
- M3 Mobile does not have any legal responsibility for any performance degradation or compatibility problem that may occur because of the user's mistake or negligence.
- M3 Mobile does not have any legal responsibility for copyright or patent breach by the user.
- M3 Mobile can request all or part of the applications developed by a user or a third party. The request is for the improvement of user environment or device performance.
- Higher OS version may be released after you purchase the device with the existing OS. If

you want to receive information on the latest OS, please contact your local distributor.

- This manual may include technical or editing errors.

Copyright

Copyright © 2015 M3 Mobile Co., Ltd.

This manual is protected under international copyright laws. No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of M3 Mobile.

Trademarks

- M3 Mobile and M3 logos are registered trademarks of M3 Mobile.
- M3 SM10 is a registered trademark of M3 Mobile Co., Ltd.

Instructional Icons

Before using this manual, please carefully read and understand the following icons:



Warning – Situations that may cause injury to yourself or others



Caution – Situations that may cause damage to your device or other equipment



Note – Notes, usage tips, or additional information

Safety Rules

- Do not use the device while driving.
 - ✓ Traffic accidents may occur.
 - ✓ Observe the rules on device use while driving.
- Do not touch the power plug with wet hands.
 - ✓ You may be electrocuted.
- Be careful when using the battery.
 - ✓ Avoid causing a strong impact on the battery or breaking a hole through it with a sharp thing.
 - ✓ Do not put water on the battery or submerge it in water.
 - ✓ Do not let the charging terminal of the battery come into contact with a metal material.
- Keep the device, battery, or charger away from direct heat sources.
 - ✓ Heat may cause the device to become deformed, or an explosion or fire may occur.
 - ✓ If the device is placed inside a vehicle, the battery may explode due to the increase in temperature.
- Do not use the device when there is thunder or lightning.
 - ✓ Lightning or fire may cause the device to break down or you may be electrocuted.
- Turn the power of the device to off when device use is prohibited.
 - ✓ Hazardous or wave-related problem may occur.
 - ✓ Turn the power of the device to off when you board a plane. The electromagnetic waves generated from the device may affect the plane's electronic equipment.
 - ✓ Turn the power of the device off when you are in a hospital. Observe the device rules while in the hospital. The electromagnetic waves generated from the device may affect the medical equipment in the hospital.
- Turn the power of the device to off in hazardous areas where explosions may occur.
 - ✓ Observe the regulations, instructions, or signs of a hazardous area where explosions may occur.
 - ✓ Turn the power of the device to off while refueling.
- Be careful when a headset is used.
 - ✓ Avoid long-term exposure to loud sounds to prevent damage to your hearing.

- ✓ Loud sounds while walking or driving distract your attention and may cause traffic accidents.

Revision

Release date of version 1.0: April 2015

- Initial distribution

Table of Contents

1.	Getting Started.....	10
1.1	Package Contents	10
1.1.1	Device and Accessories	10
1.2	Battery	11
1.2.1	How to Use	11
1.2.2	Charging the Battery.....	12
1.3	Turning the Device On/Off.....	15
1.3.1	Turning the Device On.....	15
1.3.2	Turning the Device Off.....	16
1.3.3	Standby Mode.....	16
1.4	Memory Card	17
1.4.1	Inserting an External Memory Card.....	17
1.4.2	Checking Data	18
1.5	SIM Card.....	18
1.5.1	Inserting the SIM Card.....	18
1.6	SAM Card	19
1.6.1	Inserting the SAM Card	19
2.	Basic Use.....	20
2.1	Features.....	20
2.2	Key.....	21
2.2.1	Button	21
2.3	Home Screen.....	21
2.3.1	Status Bar	22
2.3.2	Notification Bar	23
2.3.3	Home Screen.....	24
2.3.4	Dock Bar	24
2.4	Data Input	25
2.4.1	Virtual Keyboard	25

2.5	Device Reset	25
2.5.1	Soft Reset (1).....	25
2.5.2	Soft Reset (2).....	26
2.5.3	Factory Reset	26
2.6	Connecting with PC	26
2.6.1	How to Connect	26
3.	Using the Application Screen.....	28
3.1	Phone Function.....	28
3.1.1	Basics	28
3.2	Wi-Fi	29
3.2.1	Setting the Wi-Fi Feature.....	29
3.3	Scanner	30
3.3.1	How to Use the Scanner.....	30
3.3.2	Using the Scanner	31
3.4	Bluetooth.....	32
3.4.1	Setting the Bluetooth Feature.....	32
3.4.2	Connecting Bluetooth	33
3.5	NFC	35
3.5.1	Setting the NFC Feature.....	35
3.5.2	Connecting the NFC Feature.....	37
4.	Advanced Use	39
4.1	OS Update	39
4.2	Key Setting Conversion	40
5.	Others	42
5.1	Device Specifications	42
5.2	Service	43
5.2.1	Contacts.....	43

1. Getting Started

1.1 Package Contents

1.1.1 Device and Accessories


The **M3 SM10** package includes the following items:




<M3 SM10>



<Battery>

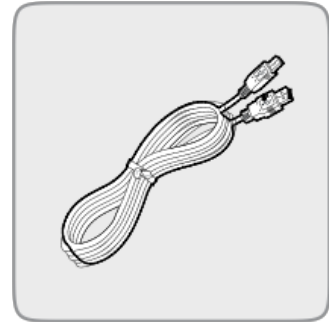

<Micro-USB Cable>

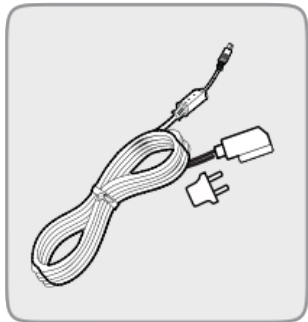

<Adaptor>



<Quick Manual>


If one or more items above are damaged or are not included in the package, contact the store where you purchased the device. (Only one package is provided to one device.)



If the device is used for purposes other than the original device use or if it is remodeled, you may be exposed to electromagnetic waves.

1.2 Battery

1.2.1 How to Use

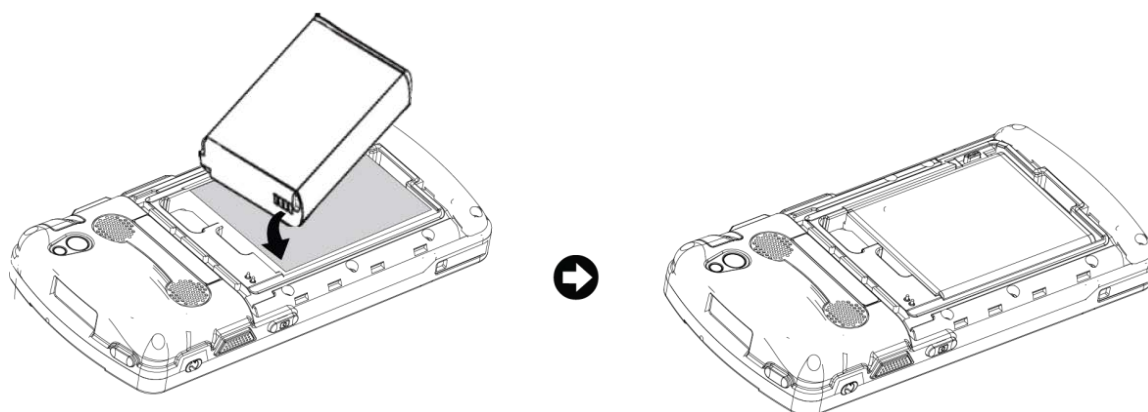

Inserting the Battery

- Insert the battery from the bottom in the right direction.
- After inserting the battery, slide the Slide button to the left to fix the locking device.




M3 SM10 uses 3.8 V, 4,100 mAh Li-ion (standard battery) or 3.8 V, 6,150 mAh Li-ion (extended battery).



- If an unapproved battery is used, it may explode.
- When a battery is discarded, follow proper disposal procedure.
- Check if the battery is inserted in the right direction.

Removing the Battery

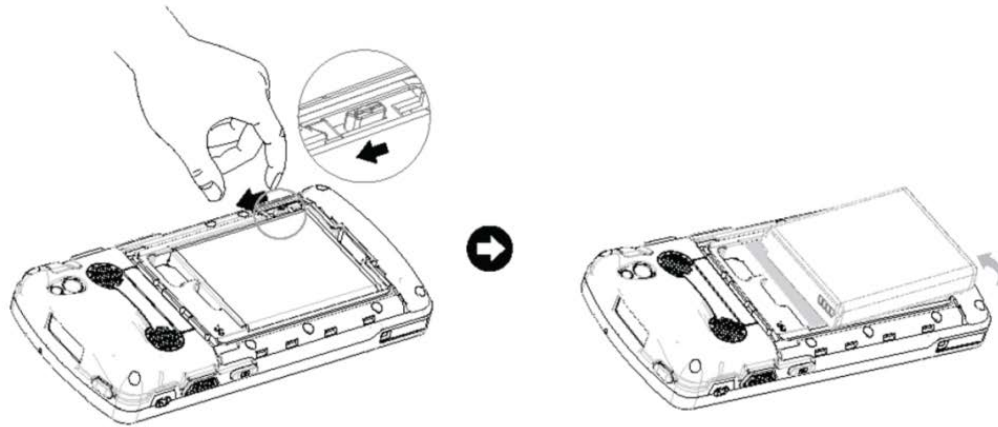

If the battery is not properly removed, the battery terminal may become bent or damaged.

Before the battery is removed, close any running program. If it is not closed, an error may occur in the program.

Before the battery is removed, save the data being used.




M3 SM10 can be used for up to 10 hours after the battery is fully charged.

(The maximum time of using the device depends on the usage environment of a user.)


1.2.2 Charging the Battery

If the following battery warning screen is displayed, charge the battery. If the device is continuously used without charging the battery, its power will be turned off.

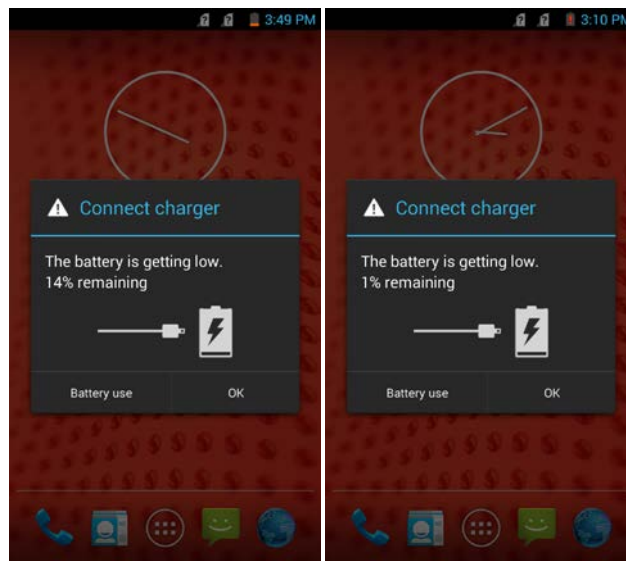

Charging the Battery

- Use a portable adaptor to connect with the micro-USB port to supply external power.
- Alternatively, you may connect the device to a cradle that you can additionally purchase to charge the battery.

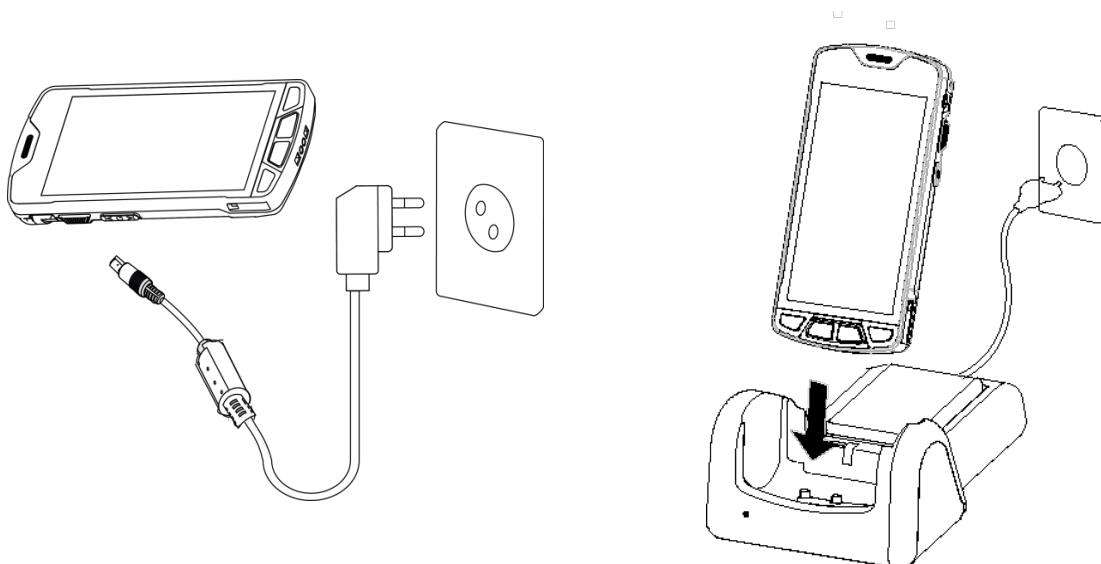



AC adaptor can be used in 100–240 V, 2A. If a voltage beyond the range is supplied, the device may be seriously damaged.



Use only an M3 Mobile-approved adaptor. If not, the device may malfunction or be damaged during or after its charging, or the battery performance may degrade.

LED Color	Description
Red	Battery is being charged.
Green	Battery is fully charged.



If the battery is being used at the temperature other than -20°C (-4°F) – 60°C (140°F), the device may malfunction or break down.

It takes about 4–5 hours to fully charge a battery that is fully discharged.






- *It is recommended to replace the battery every two years.*
- *If a battery is charged and used continuously, its lifespan will decrease.*

For information on the device battery, tap



→ **Battery.**

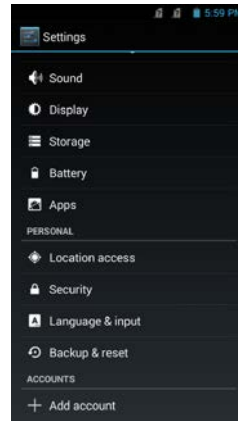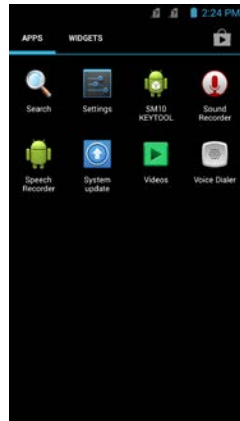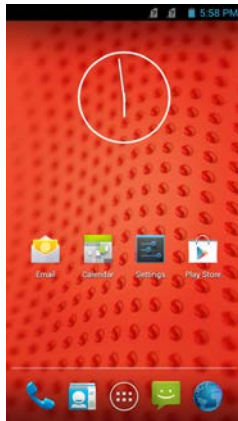

1.3 Turning the Device On/Off

1.3.1 Turning the Device On

Press and hold the Power button until the device vibrates. This will turn the device on and the initial screen will be displayed.




If the battery is completely discharged or charge is too low, problems may occur when the device is turned on. If a problem occurs, charge the battery before turning the device on again.



1.3.2 Turning the Device Off

Press and hold the Power button for about one second to display the following pop-up screen. Select the End menu to turn the power off.

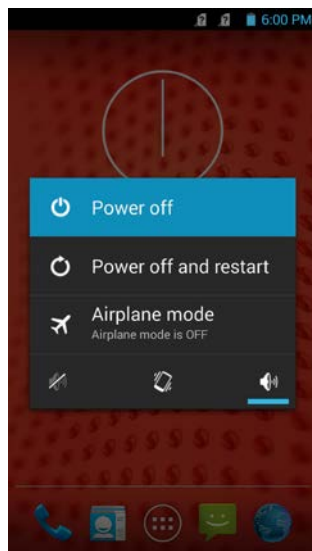



If the device stops its operation for a long time, press and hold the Power button for about eight seconds to forcibly turn the device off.


1.3.3 Standby Mode

If the device is not used for a long time, M3 SM10 automatically shifts to standby mode to decrease battery consumption. To manually set the device in standby mode, lightly press the Power button.

By default, if the device is not used for one minute or longer, it shifts to standby mode.

The time wherein the device shifts to standby mode can be set by the user.


Tap  →  → **Display** → **Sleep** to change the time that the device will shift to standby mode.

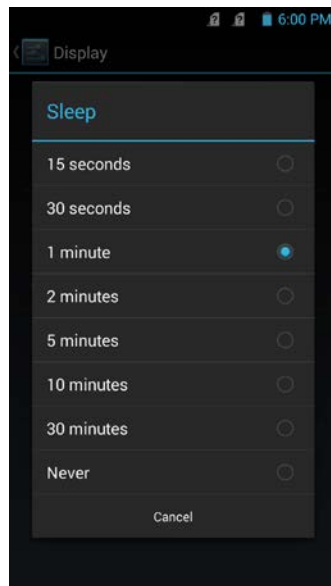

1.4 Memory Card

1.4.1 Inserting an External Memory Card

The Micro-SD card is used as an external memory of M3 SM10. After removing the battery, insert the SD memory card into the Micro-SD card slot.

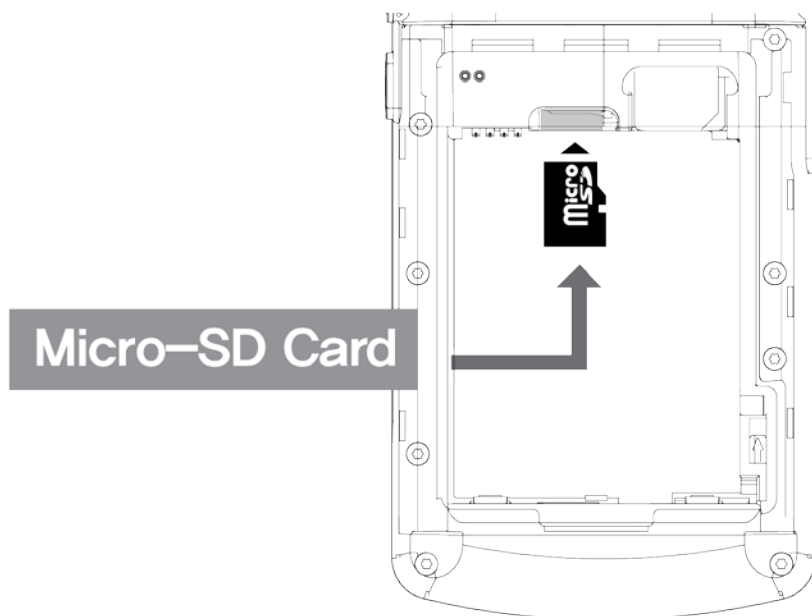

To insert the Micro-SD card, remove the battery cover on the rear of the device and pull out the battery.



- *Android 4.3 (Jelly Bean), the OS used in M3 SM10, can support up to 32 GB for external memory.*

1.4.2 Checking Data

Information stored in the Micro-SD card can be checked by tapping **SD Card**.



FOLDER →


1.5 SIM Card

1.5.1 Inserting the SIM Card

The SIM card supports voice call and data transfer through mobile communications. The card should be verified by the local network supplier.

To insert the SIM card, remove the battery cover on the rear of the device and pull out the battery.

Either the front or back of the SIM card can be connected to the dual slot.

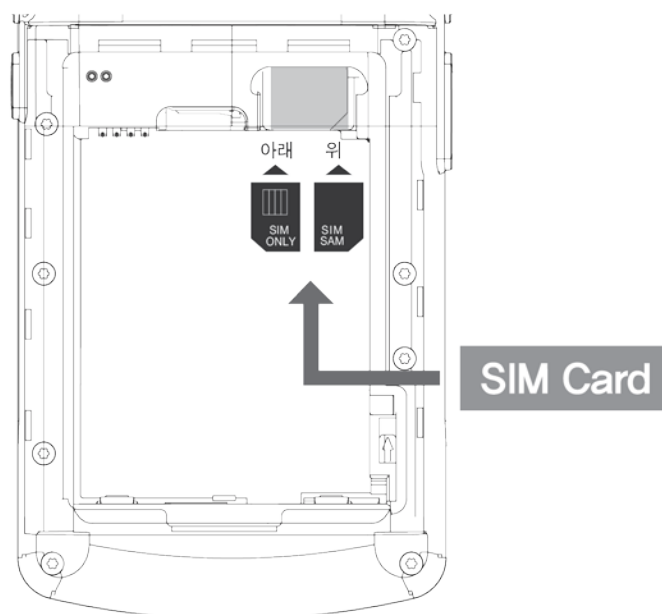

For more information on how to use the phone, please see the phone section.




- When using two SIM cards, Slot 1 supports 3G/2G and Slot 2 supports GSM only.
- When using only one SIM card, Slot 1 supports 3G/2G and Slot 2 supports 2G only.

1.6 SAM Card

1.6.1 Inserting the SAM Card


If the SAM card is needed, the front of the card can be connected to the dual slot.

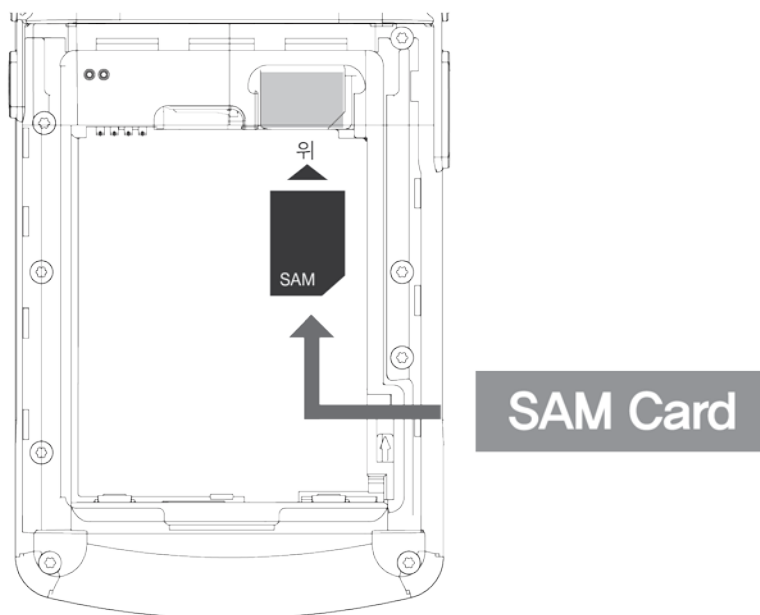

2. Basic Use

2.1 Features

Device Layout

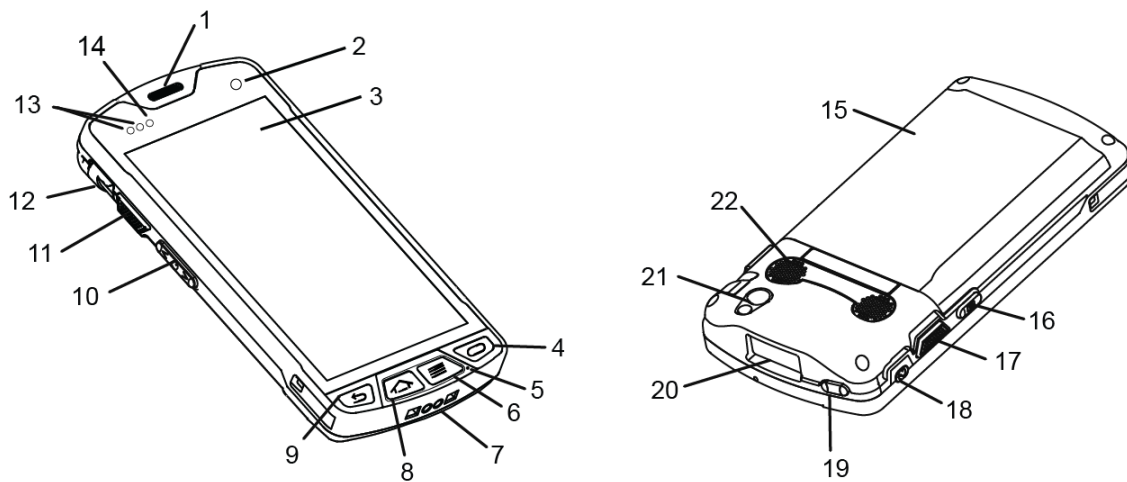

- | | | |
|----------------------|-------------------------|--------------------|
| 1. Receiver | 9. Back Button | 17. Scanner Button |
| 2. Camera | 10. Volume Button | 18. Ear Jack Hole |
| 3. Screen | 11. Scanner Button | 19. Power Button |
| 4. Function Button | 12. Micro-USB Connector | 20. Scan Window |
| 5. Microphone | 13. Sensor | 21. Camera |
| 6. Menu Button | 14. Charging LED | 22. Speaker |
| 7. Charging Contacts | 15. Battery Cover | |
| 8. Home Button | 16. Camera Button | |

2.2 Key

2.2.1 Button

Button	Description
Scanner	Operate the scanner while executing the scanner program.
Volume High	Increase the volume.
Volume Low	Decrease the volume.
Camera	Take pictures while executing the camera program.
Back	Return to the previous stage.
Home	Go to the Home screen.
Menu	Display the menu.
Action	Execute the work set to the button.

2.3 Home Screen

If the device is turned on, the following screen will be displayed. The screen is divided into four sections as follows:




















2.3.1 Status Bar

The Status Bar displays the status of the device.

Icon	Icon Name	Description
	Battery	Displays the battery charging status or battery residual capacity.
	Phone	Displays the call strength or no signal.
	Sound/Vibration	Displays the sound or vibration status of the device.
	Wi-Fi	Displays the Wi-Fi connection/disconnection.
	Bluetooth	Displays the Bluetooth connection/disconnection.
	GPS	Displays the status of searching the location data.
	Alarm	Displays the alarm activation status.
	Flight Mode	Displays the activation status of Flight mode.
	NO SIM	Displays if the SIM card is not connected.
	3G Network	Displays the 3G network connection status.









2.3.2 Notification Bar

The Notification Bar displays device notifications.

Icon	Icon Name	Description
	More	Indicates that there are more notifications.
	Data Sync	Indicates that data is being synchronized.
	Schedule	Displays the schedule.
	Wi-Fi	Indicates that open Wi-Fi network can be used.
	Music	Indicates that music is being played.
	Data Sync	Indicates that an error occurs when data is being synchronized.
	Data Upload	Indicates that data is being uploaded.
	Data Download	Indicates that data is being downloaded.
	SD Card Full	Indicates that the capacity of the SD card is full.
	USB	Indicates that the device is being connected through a USB.
	Debugging	Indicates that USB debugging can be used.
	Received Message	Indicates that there is a message received.
	Missed Call	Indicates that there is a missed call.
	WiFi hotspot	Indicates that Wi-Fi hotspot is being activated.
	USB tethering	Indicates that USB tethering is being activated.
	Bluetooth tethering	Indicates that Bluetooth tethering is being activated.
	Virtual Private Network	Indicates that it is connected to Virtual Private Network(VPN).





2.3.3 Home Screen

In the Home Screen, there are shortcut icons of the main programs. A shortcut icon can be added or deleted.

Icon	Icon Name	Description
	Setting	Sets M3 SM10.
	E-mail	Sends or receives an e-mail.
	Play Store	Runs Play Store.
	Calendar	Sets, manages, or reserves a schedule.
	Camera	Takes a picture or records a video.
	Gallery	Displays the stored pictures.
	Music	Plays stored music.
	Video	Plays stored videos.

2.3.4 Dock Bar

Shortcut icons can be placed on the lower section to rapidly execute frequently used programs. In the Dock Bar, up to four shortcut icons may be added or deleted.

Icon	Icon Name	Description
	Phone	Receives or makes a call.
	Address Book	Manages the address book.
	Message	Receives or sends a text message.
	Internet	Enables the Internet.

2.4 Data Input

2.4.1 Virtual Keyboard


If focus is located in the input screen, the virtual keyboard will be automatically displayed.



2.5 Device Reset

2.5.1 Soft Reset (1)

Press and hold the Power button to display the power management menu. Select the “Power Off and Restart” menu.

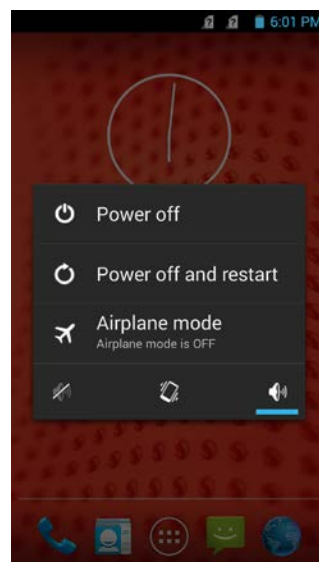

2.5.2 Soft Reset (2)


If the device stops its operation for a long time, press the Volume Down button + the Back button + the Camera button to perform soft reset.

The program being executed will end, and the data or file being used will also be deleted. However, the stored data or file will not be affected by the soft reset.

2.5.3 Factory Reset

If a serious problem occurs in the device or a problem is not resolved through soft reset, perform factory reset.

For factory reset, perform the following procedure:

- Tap  → **Backup & Reset** → **Factory data Reset**
- **Check if Erase internal SD card is checked. → Reset device. → Erase everything**
- According to the options, the document in the internal SD card or the Micro-SD card may be deleted. As such, please check the options. All settings will be reset.

2.6 Connecting with a PC

2.6.1 How to Connect

To connect the device to a PC, perform the following procedure:

1. Connect the device to a PC through a USB cable.



- Media Device (MTP) – Media file can be sent.
 - Camera (PTP) – With the camera software, a photo can be sent.
 - SD Card – A file in the SD card of the device can be sent.
 - Charging – This mode is only for charging the device. Data cannot be sent.
2. PC recognizes the device and automatically installs its driver.
 3. Once the driver is completely installed, a file can be transferred through Explorer.



If the device does connect with a PC, check the following items:

- *Check if the USB cable is properly connected between the device and PC.*
- *Check if the LCD screen of the device is turned on.*


Check the above items and connect them again.


3. Using the Application Screen


3.1 Phone Function


M3 SM10 supports the 2G (GSM, CDMA) and 3G (UMTS, HSPA+) networks.


3.1.1 Basics

Press the  icon to use the Phone menu.

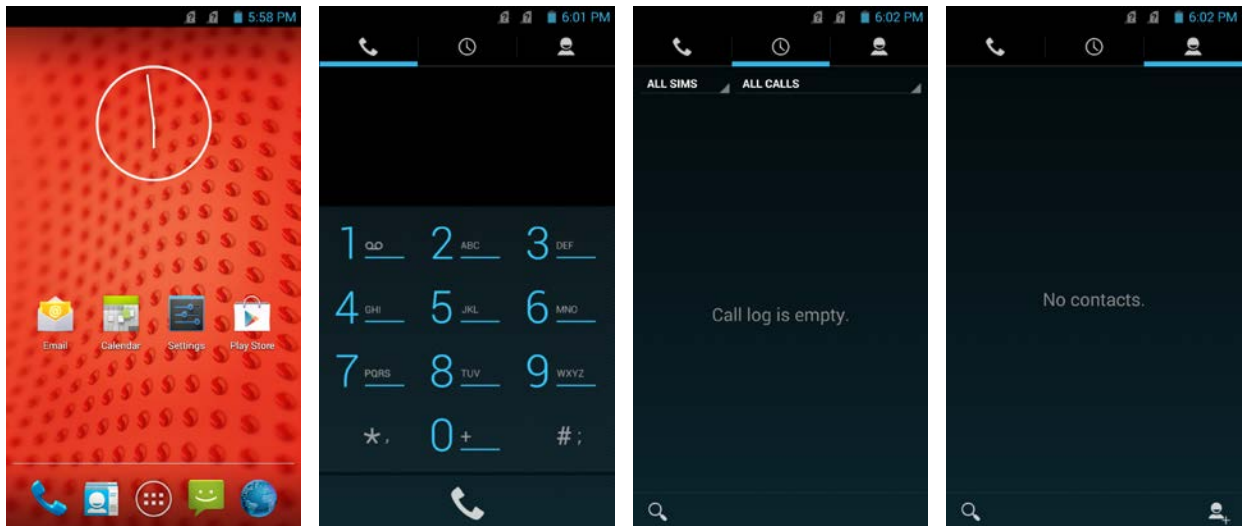

- Press the () icon to see the call history.

- Press the () icon to see the contacts.

- Press the () icon to add a contact.







Before making a call or transferring data through a network, check if the phone function is turned on.

3.2 Wi-Fi

3.2.1 Setting the Wi-Fi Feature


Activating the Wi-Fi feature


Tap  →  and set the Wi-Fi menu to ON/OFF to activate or deactivate the Wi-Fi feature.

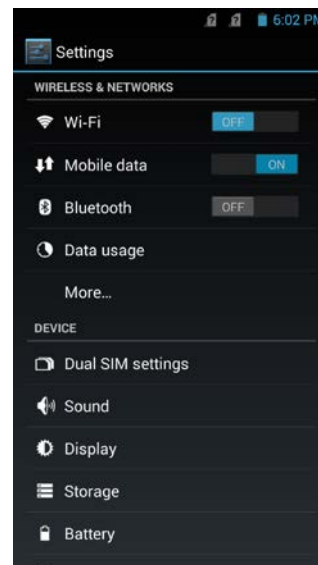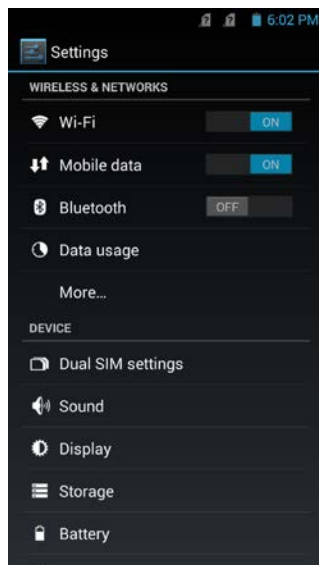



Connecting to a Wi-Fi network

To connect to an AP, perform the following procedure:

- i. Select the “Wi-Fi” menu of the  icon.

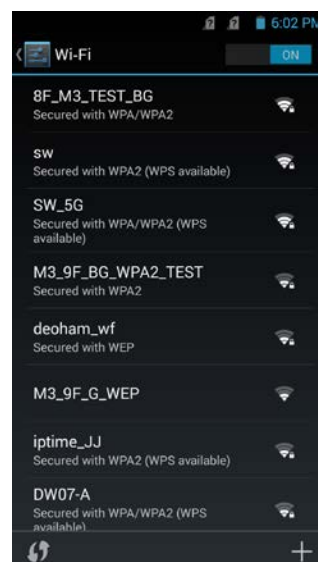

- ii. In the list, select an AP name to access it. If necessary, enter the password to complete the access.

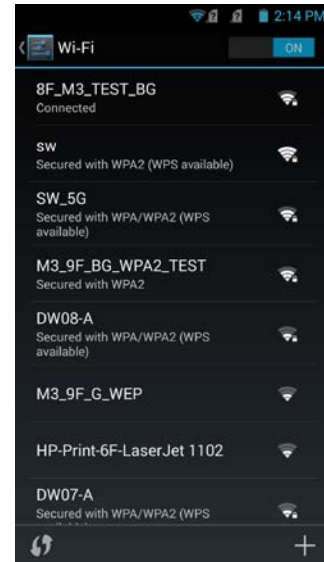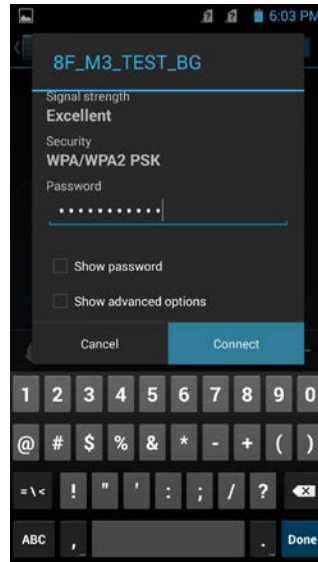

3.3 Scanner

M3 SM10 provides the 1D or 2D scanner as an option. For detailed information on available options, please contact the local distributor or refer to our Web site. (Home page: <http://www.m3mobile.net>).

3.3.1 How to Use Scanner

M3 Mobile provides the program needed to use a scanner by default.



It is the keyboard wedge program that sends barcode data.


The ScanEmul program can be used regardless of 1D/2D scanner.



In case of a 2D scanner, it cannot be simultaneously used with a camera.

3.3.2 Using the Scanner

Place the device toward to the barcode desired, and press the Scan button.

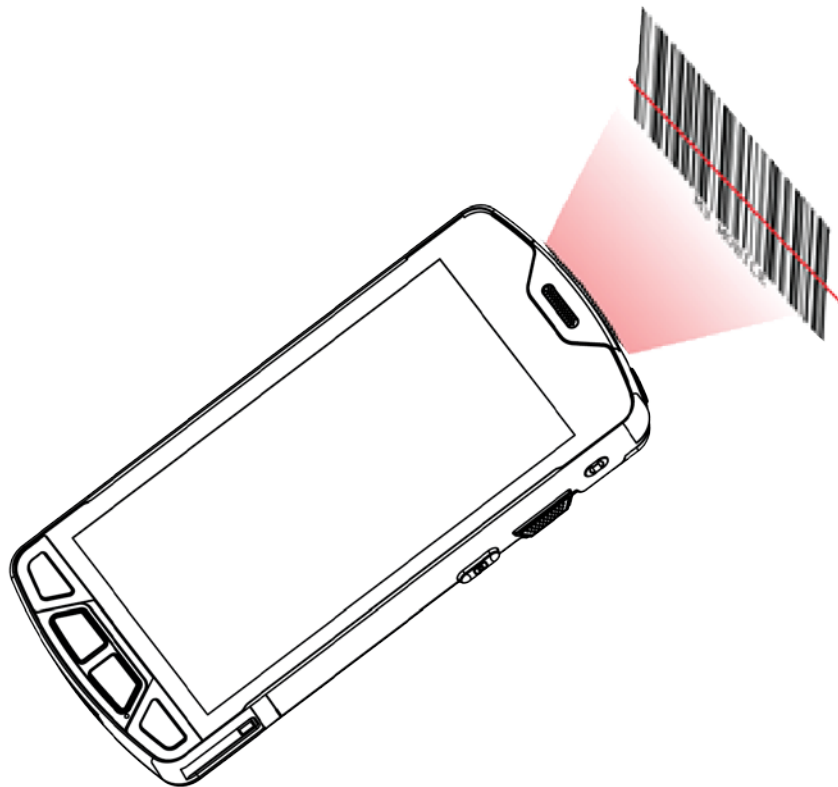

The laser beam of the scanner should completely cover the bar code as shown in the following.



O



X

<1D Scanner>



O



X

<2D Scanner>



1. Do not look at the laser beam directly.

(CLASS 2 LASER PRODUCT 1.0 mW, MAX OUTPUT: 650 nm)




2. If the device is used for purposes other than that described in this manual, a user may be exposed to harmful electromagnetic waves.


3.4 Bluetooth

3.4.1 Setting the Bluetooth Feature

A Bluetooth device frequently used can be registered or the M3 SM10 can be searched in another device.



Activating the Bluetooth feature

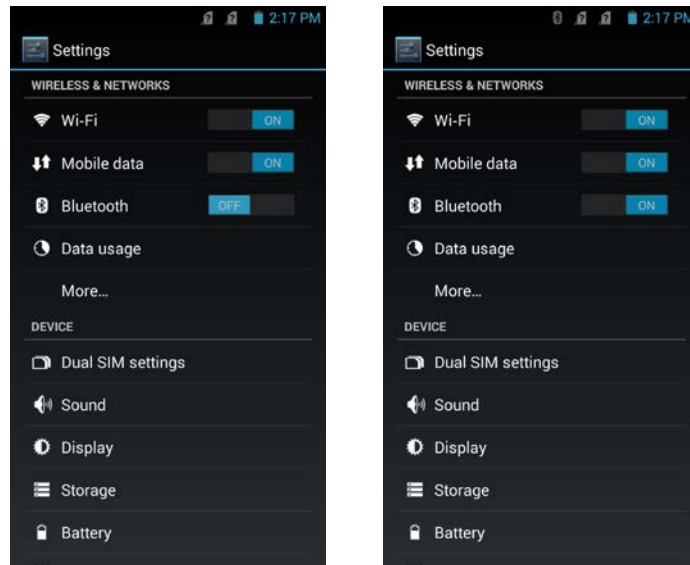Tap  →  and set the Bluetooth tab to ON/OFF to activate or deactivate the Bluetooth feature. If the Bluetooth signal is turned on, the Bluetooth icon () is displayed in the Status bar indicating that the Bluetooth feature is activated.




3.4.2 Connecting Using Bluetooth

Connecting Using Bluetooth


To connect using Bluetooth, tap  → **Bluetooth**. To activate the Bluetooth feature, select the **Bluetooth** tab of the  icon.

Connect M3 SM10 with a Bluetooth device to share information via wireless connection.


1. Tap  → **Bluetooth** → **SEARCH FOR DEVICES** to search a device to connect.

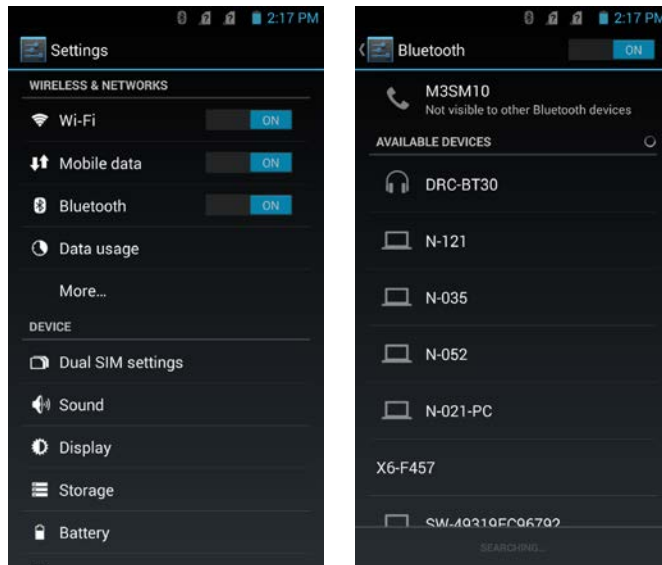

2. Select a Bluetooth device.

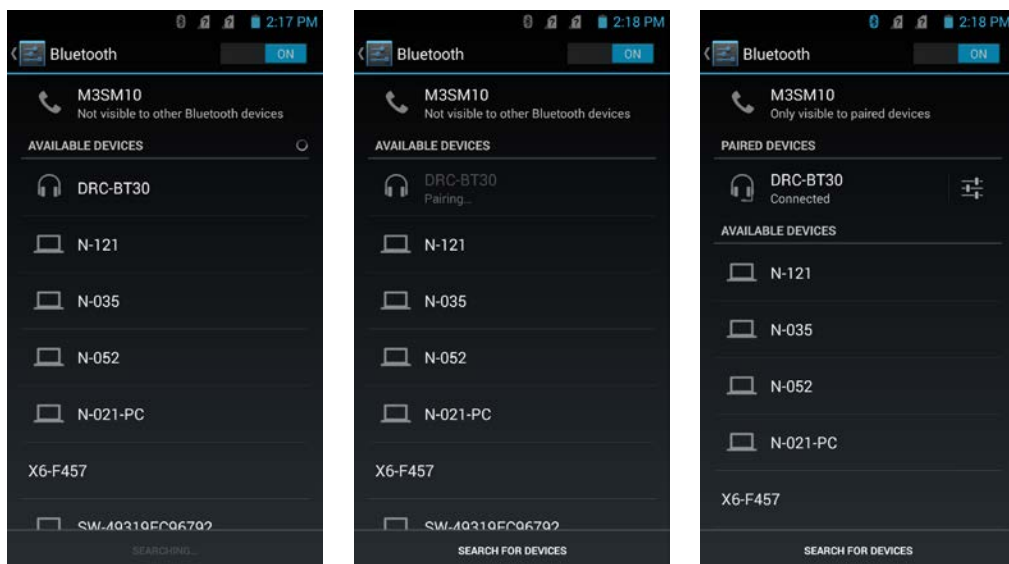

3. If the **"Bluetooth pairing request"** screen is displayed, enter the PIN code of a Bluetooth device to complete access to the device.

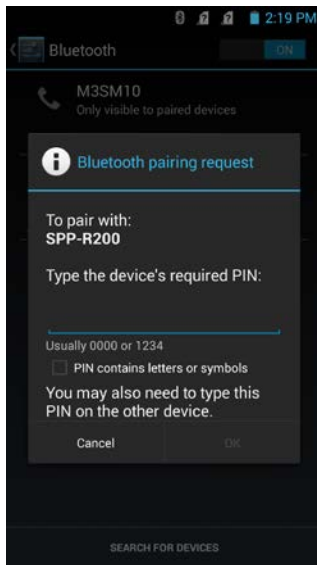

Guide on the distance between the device and user

The device is tested in general conditions wherein the back part of the device is 1.5 cm apart from a user.



To meet the radiation safety and protection standards of the Ministry of Science, ICT and Future Planning, the back part of the device and the antenna should be 1.5 cm or more from a user regardless of the antenna use.

It is recommended to refrain from using a metal belt clip, case, or accessory.


Do not wear an accessory 1.5 cm or shorter from the back part of the device or one that does not meet the radiation safety and protection standards of Ministry of Science, ICT and Future Planning.

3.5 NFC

3.5.1 Setting the NFC Feature

Activating the NFC Feature

Before using the NFC feature, insert the NFC USIM card into the device.

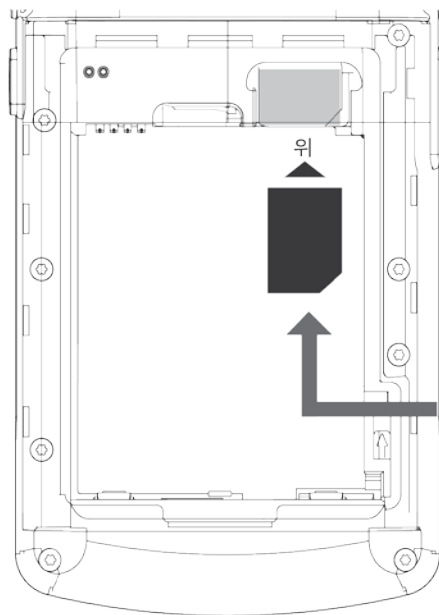


NFC USIM Card



Insert the NFC USIM into USIM SLOT1 (front of Dual SIM Slot).


Tap  →  → **More...** → **NFC** to activate or deactivate the NFC feature.

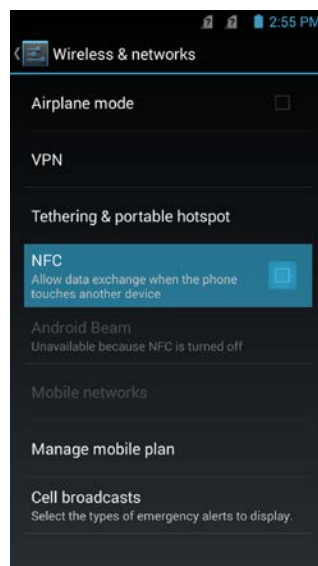

3.5.2 Connecting the NFC Feature

Connecting with the NFC Device

1. Open a Web page or the screen of a video, photo, or contact.
2. Place the back part of the NFC device toward the back of the M3 SM10.

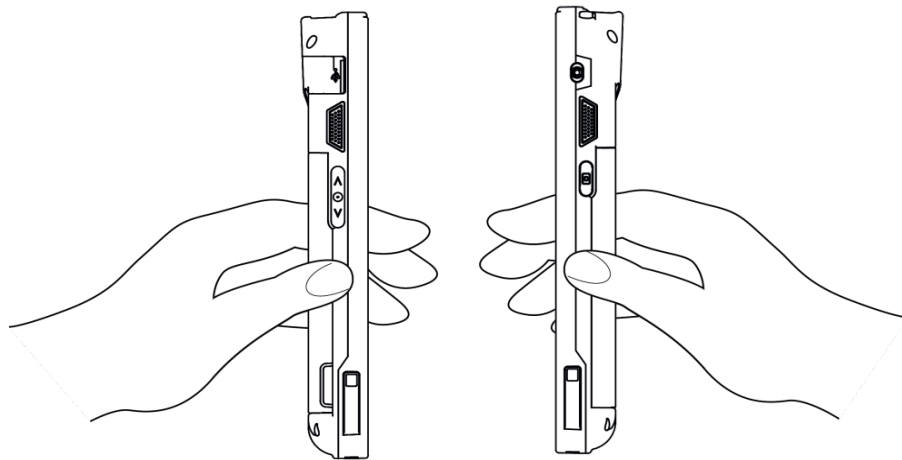

3. Touch the screen. Data transfer would then start.

Caution when sharing data

While sharing data, the distance between devices should be less than 5 cm.



Caution when transferring data


When transferring data between devices, they do not need to be closer. It is recommended to keep the distance between devices within 10 m.

Connecting to the NFC Chip / Tag Card

1. Hold the M3 SM10 as shown below. Do not cover the antenna area of the battery cover with


your hands.

2. Place the M3 SM10 near the NFC chip or tag card until the data transfer is completed.
(Generally, data is displayed in the application.)

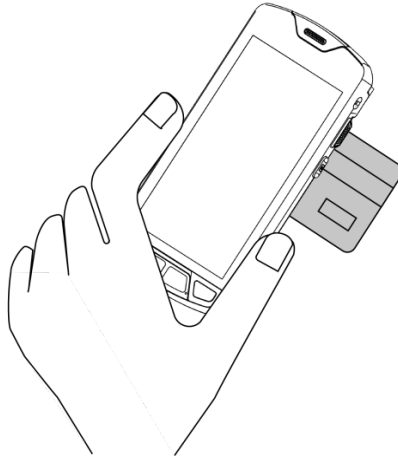

Connecting to a Bluetooth Device with the NFC Feature

1. Hold M3 SM10 as shown below. Do not cover the antenna area of the battery cover with hands.
2. Place M3 SM10 near the device. The device displays that connection is successfully performed.

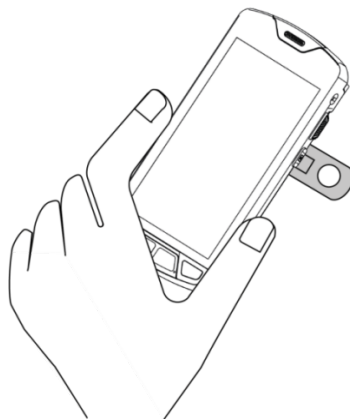

4. Advanced Use

4.1 OS Update

The M3 Mobile can distribute a new OS to improve the quality and performance of a product.

To check the OS version of the device, tap  →  → **About device** and select the OS version.



The above image is a sample.

The latest OS is described in the online support page of M3 Mobile.

The OS of M3 SM10 can be updated through two methods:

- i. Use the Micro SD card.
- ii. Connect the device through USB cable.

For detailed information on OS update, please refer to the “OS” item of the M3 FAQ (FAQ [download](#)).




4.2 Key Setting Conversion


The M3 SM10 allows a user to change and modify the key settings for user convenience.



Keys can be set as follows:

- i. SM10 KEYTOOL application

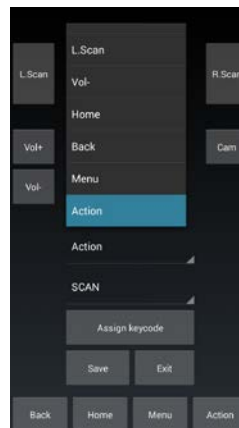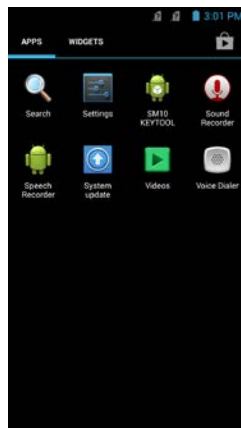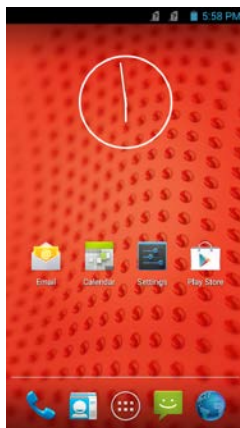

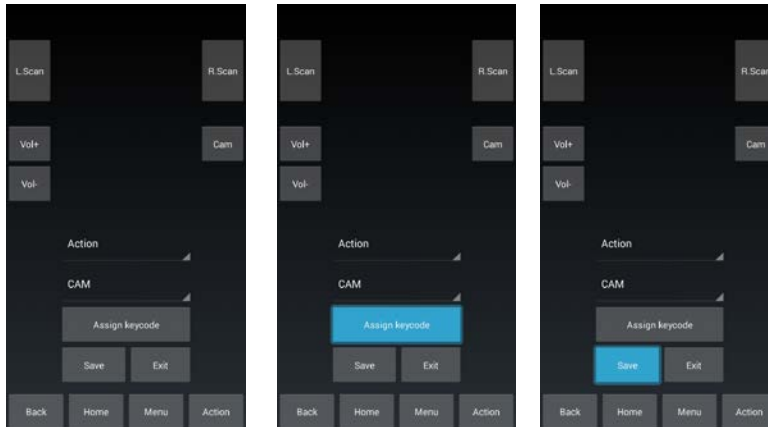

The setting of the device's physical buttons, except for the Power button, can be changed.

5. Others

5.1 Device Specifications

Physical Features	
Size (W x H x D) mm/inch	76.4 x 154.8 x 19.7 mm
	3.00 x 6.09 x 0.77 inch
Weight	277 g / 9.77 oz (Including battery)
Screen	5.0" HD LCD, 1280 x 7200 pixels
Battery	Li-ion, 3.8 V, 4,100 mAh Standard battery
	Li-ion, 3.8 V, 6,150 mA Extended battery
Performance	
Multi Processor	CPU Qualcomm Processor (1.2 GHz)
OS	Android 4.3 (JellyBean)
Memory	RAM 1 GB
	ROM 8 GB
	Card Slot Micro SD (Up to 32 GB)
Interface	USB 2.0 High Speed Client
User Environment	
Temperature	Use Temperature -20~60 °C / -4~140 °F
	Storage Temperature -30~80 °C / -22~176 °F
Humidity	95% Non-condense
Tumble Test	1,000 1.6 ft./0.5 m tumbles (2,000 drops - Bumper case mounted) 500 1.6 ft./0.5 m tumbles (1,000 drops - Bumper case not mounted)
Falling Test	1.8 m / 6.0 ft. (Boot mounted) 1.2 m / 3.9 ft. (Boot not mounted)
IP Grade	IP65
Wireless Communication Specification	
WWAN	GSM (850/900/DCS/PCS)
	CDMA (800 MHz)
	WCDMA (2100 MHz)
Wireless LAN	IEEE 802.11 a/b/g /n

Security	WEP, WPA, WPA2, TKIP, AES, EAP-FAST, EAP-TLS, EAP-TTLS, PEAP-GTC, PEAP- TLS, PEAP-MSCHAPv2, LEAP, CCXv4
Bluetooth	Class II, v4.0 with EDR
GPS	A-GPS, GLONASS (Optional)
General Options	
Scanner	1D / 2D
Camera	Front: 2 M pixels auto-focus (AF) Rear: 8 M pixels auto-focus (AF)
Keypad	Four physical buttons on the lower section



5.2 Service

If you have any questions or complaints with using our product, please contact the **M3 Service Center** or visit our **Web site** (<http://itc.m3mobile.net>). We do our best to immediately respond to your inquiry.

The M3 FAQ document may help resolve general problems.

For any questions on work programs, please contact the program supplier for faster service.

5.2.1 Contacts

Head Office

M3 Building, 735-45, Yeoksam-dong, Gangnam-gu, Seoul, 135-923, Korea
Tel: +82 2 574 0037 Fax: +82 2 558 1253

www.m3mobile.net, sales@m3mobile.co.kr

Service Center

Chun-ui Techno Park 201-610, 202, Chunui-dong, Wonmi-gu, Bucheon, Gyeonggi-do, 420-857, Korea
Tel: +82 32 623 0037 Fax: +82 70 4015 6323

Web site

<http://itc.m3mobile.net>, it@m3mobile.co.kr

M3 MOBILE